

HOW TO USE THIS MANUAL

Sections 1 through 3 apply to the whole TRX, while sections 4 through 18 describe parts of the TRX, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration and all the required specifications, torque values, general instructions, tools and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know the source of a problem, see section 19, TROUBLESHOOTING.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation whatever. No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATIONS OFFICE

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/VALVES	6
	CYLINDER/PISTON	7
	CLUTCH/OIL PUMP	8
	RECOIL STARTER/ALTERNATOR/ CAM CHAIN TENSIONER	9
	SUB-TRANSMISSION	10
	TRANSMISSION/CRANKSHAFT	11
CHASSIS	FRONT WHEEL/BRAKE/STEERING	12
	REAR WHEEL/BRAKE/DRIVE MECHANISM	13
	FRONT FENDER/REAR FENDER/ EXHAUST PIPE	14
ELECTRICAL	IGNITION SYSTEM	15
	BATTERY/CHARGING SYSTEM	16
	STARTER SYSTEM	17
	LIGHTS/SWITCHES	18
	TROUBLESHOOTING	19