

**FOLDING REAR SEAT BACK LATCH HANDLE (Continued)****INSTALLATION**

- (1) Route cable end into latch release handle.
- (2) Rotate cable end until barrel end aligns with key hole slot in latch release handle and insert into handle.
- (3) Engage retainers securing latch release cable housing to latch release handle.
- (4) Position latch release handle in seat back. Ensure seat back cover is properly aligned.
- (5) Install screws attaching release handle to seat back frame.

**FOLDING REAR SEAT BACK LATCH/HINGE****REMOVAL**

- (1) Remove seat back (Refer to 23 - BODY/SEATS/ REAR SEAT BACK - REMOVAL).
- (2) Disengage J-straps on outboard side of seat back.
- (3) Disengage release cable from latch.
- (4) Remove bolts attaching latch/hinge to seat back frame.
- (5) Separate latch/hinge from seat back frame.

**INSTALLATION**

- (1) Position latch/hinge on seat back frame.
- (2) Install bolts attaching latch/hinge to seat back frame. Tighten bolts to 28 N·m (20 ft. lbs.) torque.
- (3) Engage latch release cable.
- (4) Engage J-straps on outboard side of seat back.
- (5) Install seat back (Refer to 23 - BODY/SEATS/ REAR SEAT BACK - INSTALLATION).