

**PREFACE**

This manual covers the construction, function and servicing procedure of the Honda BF35A·45A outboard motors. Careful observance of these instructions will result in better, safer service work.

Illustrations in this manual are based primarily on the BF45A LRT.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

**HONDA MOTOR CO., LTD.**  
**SERVICE PUBLICATIONS OFFICE**

**CONTENTS**

<b>SPECIFICATIONS</b>	<b>1</b>
<b>SERVICE INFORMATION</b>	<b>2</b>
<b>MAINTENANCE</b>	<b>3</b>
<b>ENGINE COVER/THROTTLE/CHOKE</b>	<b>4</b>
<b>FUEL SYSTEM</b>	<b>5</b>
<b>FLYWHEEL/TIMING BELT</b>	<b>6</b>
<b>ENGINE REMOVAL/INSTALLATION</b>	<b>7</b>
<b>WATER JACKET COVER/THERMOSTAT/ THERMO SWITCH</b>	<b>8</b>
<b>CYLINDER HEAD/VALVE/OIL PUMP</b>	<b>9</b>
<b>CRANKCASE/CYLINDER BLOCK/ CRANKSHAFT/PISTON</b>	<b>10</b>
<b>PROPELLER/GEAR CASE/ EXTENSION CASE</b>	<b>11</b>
<b>OIL PAN/PRIMARY GEAR CASE/ SWIVEL CASE</b>	<b>12</b>
<b>GAS ASSIST/POWER TILT</b>	<b>13</b>
<b>STEERING ROD/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)</b>	<b>14</b>
<b>THROTTLE BRACKET/SHIFT LEVER/ HANDLEBAR (TILLER HANDLE TYPE ONLY)</b>	<b>15</b>
<b>ELECTRICAL EQUIPMENT</b>	<b>16</b>
<b>OPERATION</b>	<b>17</b>
<b>BF35 - BF45 SUPPLEMENT</b>	
<b>BF40 - BF50 SUPPLEMENT</b>	