

INSPECTION

NOTE:

If excessive wear, crack, defective or other damage is found on any component, replace.


PROPELLER

- Inspect the propeller. If bend, chip or other damage is found on the blades, replace or repair the propeller.
- Inspect the propeller bushing. If excessive wear or other damage is found on the splines, replace the bushing. If deterioration or evidence of slipping on the rubber part, replace the bushing.
- Inspect the shear pin. If bend or other damage is found, replace the shear pin.



GEARCASE

- Inspect the gearcase. If crack or other damage is found, replace the gearcase.
- Visually check the forward gear bearing. If pitting, noisy, rough or other damage is found, replace the bearing.
- Visually check the driveshaft bushing. If excessive wear, pitting or other damage is found, replace the bushing.

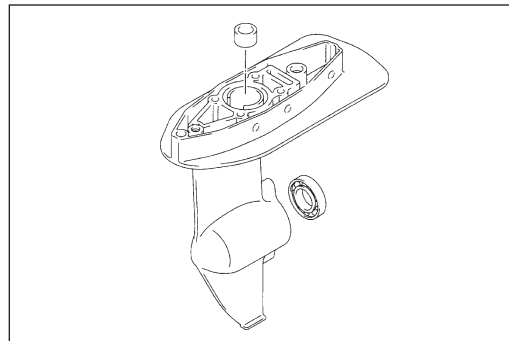

GEAR

- Inspect the teeth of the forward, reverse and pinion gear. Inspect the engaging dogs of the forward and reverse gear. If excessive wear, chip or other damage is found, replace.
- Inspect the forward gear bushing. If excessive wear, pitting or other damage is found, replace.

