
CHAPTER 1. GENERAL INFORMATION

MACHINE IDENTIFICATION	1-1
FRAME SERIAL NUMBER	1-1
ENGINE SERIAL NUMBER	1-1
IMPORTANT INFORMATION	1-2
PREPARATION FOR REMOVAL AND DISASSEMBLY	1-2
ALL REPLACEMENT PARTS	1-2
GASKETS, OIL SEALS, AND O-RINGS	1-3
LOCK WASHERS/PLATES AND COTTER PINS	1-3
BEARINGS AND OIL SEALS	1-3
CIRCLIPS	1-3
LOCTITE®	1-3
SPECIAL TOOLS	1-4
FOR TUNE UP	1-4
FOR ENGINE SERVICE	1-5
FOR POWER TRAIN SERVICE	1-5
FOR CARBURETION SERVICE	1-6
FOR ELECTRICAL SERVICE	1-6

CHAPTER 2. PERIODIC INSPECTION AND ADJUSTMENT

INTRODUCTION	2-1
PERIODIC MAINTENANCE TABLE	2-1
ENGINE	2-3
SPARK PLUGS	2-3
OIL PUMP	2-4
FUEL LINE INSPECTION	2-6
COOLING SYSTEM	2-6
CARBURETOR SYNCHRONIZATION	2-12
ENGINE IDLE SPEED ADJUSTMENT	2-13
THROTTLE CABLE FREE PLAY ADJUSTMENT	2-13
THROTTLE OVERRIDE SYSTEM (T.O.R.S.) CHECK	2-14
STARTER (CHOKE) CABLE FREE PLAY ADJUSTMENT	2-15
EXHAUST SYSTEM INSPECTION	2-15

POWER TRAIN	2-16
SHEAVE DISTANCE AND OFFSET ADJUSTMENT	2-16
DRIVE V-BELT	2-18
ENGAGEMENT SPEED CHECK	2-20
PARKING BRAKE PAD INSPECTION	2-20
PARKING BRAKE ADJUSTMENT	2-20
BRAKE LEVER ADJUSTMENT (VX700DX/SX700/VT700)	2-21
BRAKE FLUID LEVEL INSPECTION	2-21
BRAKE PAD INSPECTION	2-22
BRAKE HOSE INSPECTION	2-22
AIR BLEEDING (HYDRAULIC BRAKE SYSTEM)	2-22
DRIVE CHAIN	2-23
TRACK TENSION ADJUSTMENT	2-26
SLIDE RUNNER INSPECTION	2-28
MAXIMIZING DRIVE TRACK LIFE	2-29

CHASSIS	2-30
SKI/SKI RUNNER	2-30
STEERING SYSTEM	2-31
LUBRICATION	2-32

ELECTRICAL	2-34
HEADLIGHT BEAM ADJUSTMENT	2-34
BATTERY INSPECTION (VX700DX/VT700)	2-35
BATTERY CHARGING (VX700DX/VT700)	2-37
FUSE INSPECTION (VX700DX/VT700) ..	2-38

TUNING	2-40
CARBURETOR TUNING	2-40
CLUTCH	2-47
GEAR SELECTION	2-52
HIGH ALTITUDE TUNING	2-58
FRONT SUSPENSION	2-59
REAR SUSPENSION	2-60

CHAPTER 3. CHASSIS

STEERING	3-1
VX700/VX700DX/SX700/VT700	3-1
MM700	3-2
INSPECTION	3-4
INSTALLATION	3-5