

HOW TO USE THIS MANUAL

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition and the emission levels are within the standards set by the California Air Resources Board.

Sections 1 through 3 apply to the complete FOURTRAX, while sections 4 through 21 describe parts of the FOURTRAX, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know the source of the trouble, go to section 22, Troubleshooting.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing. Honda Motor CO., LTD. reserves the right to make changes at any time without notice and without incurring any obligation whatever.

No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.
Service Publications Office

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/VALVES	6
	CYLINDER/PISTON	7
	CLUTCH/OIL PUMP/KICK STARTER	8
	ALTERNATOR/STARTER CLUTCH/ GEARSHIFT LINKAGE	9
	CRANKCASE/CRANKSHAFT/ TRANSMISSION	10
	CHASSIS	FRONT WHEEL/SUSPENSION/STEERING
BRAKES		12
REAR WHEEL/SUSPENSION		13
FRONT DRIVING MECHANISM (TRX300FW)		14
REAR DRIVING MECHANISM		15
CARRIERS/FENDERS/MUFFLER		16
ELECTRICAL	IGNITION SYSTEM	17
	BATTERY/CHARGING SYSTEM	18
	STARTER SYSTEM	19
	LIGHTS/SWITCHES	20
	WIRING DIAGRAM	21
	TROUBLESHOOTING	22
	INDEX	23