

Contents

LIVING WITH YOUR BMW

Introduction	Page	0•4
Safety First!	Page	0•6
Anti-theft audio system	Page	0•7
Instrument panel language display	Page	0•7

Roadside Repairs

Jacking, towing and wheel changing	Page	0•8
Jump starting	Page	0•9
Identifying leaks	Page	0•10

ROUTINE MAINTENANCE

Routine Maintenance and Servicing	Page	1•1
Lubricants and fluids	Page	1•3
Maintenance schedule	Page	1•4
Weekly checks	Page	1•7
Every 6000 miles	Page	1•11
Every 12 000 miles	Page	1•16
Every 24 000 miles	Page	1•23
Every 60 000 miles	Page	1•26