

Parts Location (Cont'd)

3F-E, 3F Engine


- Low Oil Pressure Warning Switch
- Oil Pressure Sender Gauge

Air Filter Warning Switch

Brake Fluid Level Warning Switch

- Relay Block No. 2
- DOME Fuse

Water Temperature Sender Gauge

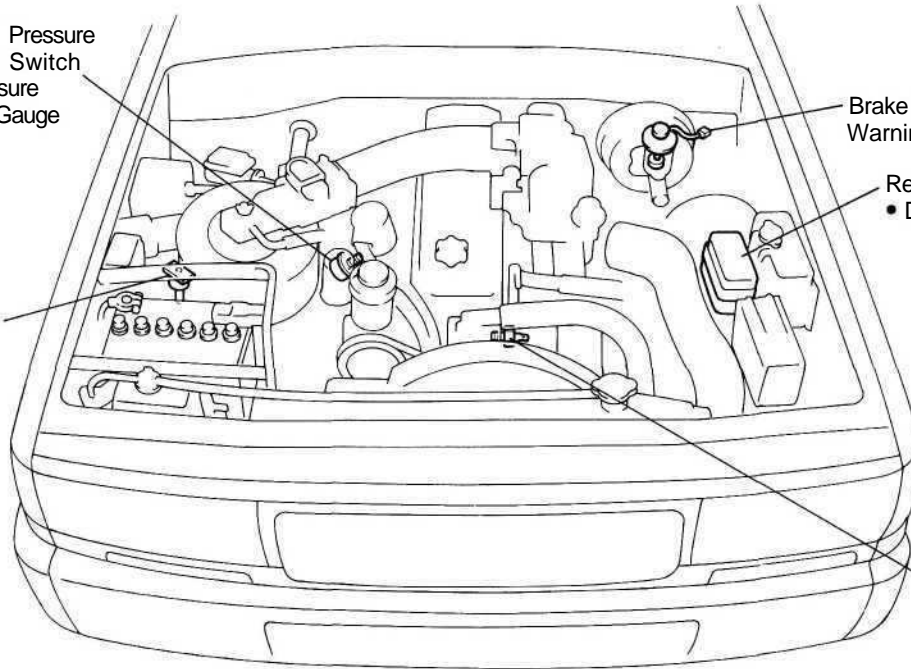

1HD-T, 1HZ Engine

Water Temperature Sender Gauge

- Low Oil Pressure Warning Switch
- Oil Pressure Sender Gauge

Brake Fluid Level Warning Switch

Turbo Indicator Pressure Switch (1HD-T engine)

Vacuum Switch (Brake Warning)

- Relay Block No. 2
- DOME Fuse

Air Cleaner Warning Switch

Fuel Filter Warning Switch

Tacho Pick Sensor (w/ Tachometer)

