

## Wiring Diagram Index (Ignition)

This chart is designed to direct the technician to the appropriate Ignition Harness Wiring Diagram. Select the snowmobile model from the chart to determine the correct diagram.

Click on orange text to view diagram.

Snowmobile Models	Ignition Harness
<a href="#">Bearcat 340</a>	A
<a href="#">Bearcat 440 I</a>	A
<a href="#">Bearcat 440 II</a>	A
<a href="#">Bearcat W/T</a>	B
<a href="#">Pantera 580 EFI</a>	C
<a href="#">Pantera 1000</a>	G
<a href="#">Panther 340</a>	A
<a href="#">Panther 440</a>	A
<a href="#">Panther 550</a>	B
<a href="#">Powder Special 500 EFI</a>	C
<a href="#">Powder Special 500 EFI LE</a>	C
<a href="#">Powder Special 600</a>	I
<a href="#">Powder Special 600 EFI</a>	J
<a href="#">Powder Special 600 EFI LE</a>	J
<a href="#">Powder Special 700</a>	H
<a href="#">Powder Special 700 LE</a>	H
<a href="#">Thundercat</a>	G
<a href="#">Thundercat M/C</a>	G
<a href="#">Triple Touring 600</a>	D
<a href="#">Z 370</a>	B
<a href="#">Z 440</a>	B
<a href="#">ZL 440</a>	E
<a href="#">ZL 500</a>	F
<a href="#">ZL 500 EFI</a>	C
<a href="#">ZL 550</a>	B
<a href="#">ZL 580 EFI</a>	C
<a href="#">ZL 600</a>	I
<a href="#">ZL 600 EFI</a>	J
<a href="#">ZL 700</a>	H
<a href="#">ZR 500</a>	F
<a href="#">ZR 500 EFI</a>	C
<a href="#">ZR 600</a>	I
<a href="#">ZR 600 EFI</a>	J
<a href="#">ZR 600 EFI LE (Clicker)</a>	J
<a href="#">ZR 600 EFI LE (Reverse)</a>	J
<a href="#">ZR 700</a>	H
<a href="#">ZR 700 LE (Clicker)</a>	H
<a href="#">ZR 700 LE (Reverse)</a>	H
<a href="#">ZRT 600</a>	D
<a href="#">ZRT 800</a>	G

## Wiring Diagram Index (Main and Hood)

This chart is designed to direct the technician to the appropriate Main Harness Wiring Diagram and Hood Harness Wiring Diagram. Select the snowmobile from the chart to determine the correct diagram.

Snowmobile Models	Main Harness	Hood Harness
<a href="#">Bearcat 340</a>	D	I
<a href="#">Bearcat 440 I</a>	D	I
<a href="#">Bearcat 440 II</a>	E	I
<a href="#">Bearcat W/T</a>	F	III
<a href="#">Pantera 580 EFI</a>	I	V
<a href="#">Pantera 1000</a>	J	V
<a href="#">Panther 340</a>	A	I
<a href="#">Panther 440</a>	B	I
<a href="#">Panther 550</a>	C	II
<a href="#">Powder Special 500 EFI</a>	G	IV
<a href="#">Powder Special 500 EFI LE</a>	G	IV
<a href="#">Powder Special 600</a>	H	IV
<a href="#">Powder Special 600 EFI</a>	G	IV
<a href="#">Powder Special 600 EFI LE</a>	G	IV
<a href="#">Powder Special 700</a>	H	IV
<a href="#">Powder Special 700 LE</a>	H	IV
<a href="#">Thundercat</a>	T	IV
<a href="#">Thundercat M/C</a>	T	IV
<a href="#">Triple Touring 600</a>	K	IV
<a href="#">Z 370 L (es A)</a>	I	V
<a href="#">Z 440 M (es A)</a>	I	V
<a href="#">ZL 440</a>	N	IV
<a href="#">ZL 500</a>	O	IV
<a href="#">ZL 500 EFI</a>	G	IV
<a href="#">ZL 550</a>	P	IV
<a href="#">ZL 580 EFI</a>	I	IV
<a href="#">ZL 600</a>	H	IV
<a href="#">ZL 600 EFI</a>	G	IV
<a href="#">ZL 700</a>	H	IV
<a href="#">ZR 500</a>	O	IV
<a href="#">ZR 500 EFI</a>	G	IV
<a href="#">ZR 600</a>	H	IV
<a href="#">ZR 600 EFI</a>	G	IV
<a href="#">ZR 600 EFI LE (Clicker)</a>	G	IV
<a href="#">ZR 600 EFI LE (Reverse)</a>	Q	IV
<a href="#">ZR 700</a>	H	IV
<a href="#">ZR 700 LE (Clicker)</a>	H	IV
<a href="#">ZR 700 LE (Reverse)</a>	R	IV
<a href="#">ZRT 600</a>	S	IV
<a href="#">ZRT 800</a>	T	IV