


FC234

5. On Firecat/Sabercat models from the underside of the bumper, remove the four torx-head screws securing the taillight assembly to the bumper.

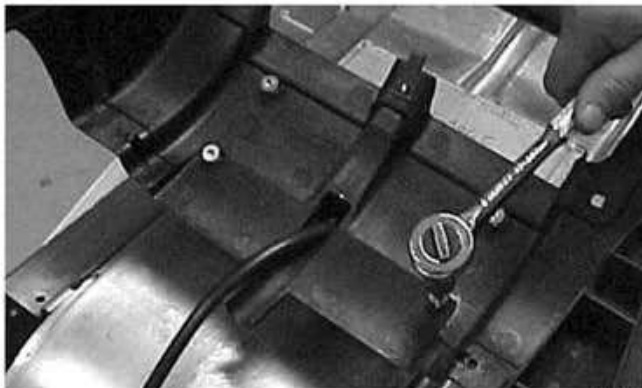

FC235

■ **NOTE:** On the Crossfire/M-Series, remove the two cap screws securing the taillight assembly to the housing.

INSTALLING

1. On the Firecat/Sabercat models, place the taillight assembly into position on the bumper; then secure with the four torx-head screws.



FC235

■ **NOTE:** On the Crossfire/M-Series, install the bumper assembly to the tunnel; then secure with the six torx-head cap screws.

2. On the Firecat/Sabercat models, place the taillight/bumper assembly into position on the tunnel.



FC234

3. On the Firecat/Sabercat models, secure the taillight/bumper assembly to the tunnel with the 10 torx-head screws.
4. On the Firecat/Sabercat models, connect the taillight wiring harness; then position the seat assembly onto the tunnel.



FC233

■ **NOTE:** On the Crossfire/M-Series, connect the taillight wiring harness; then install the taillight housing onto the bumper assembly.

5. On the Firecat/Sabercat models from inside the rear compartment, secure the seat assembly to the tunnel with the nut and washer.



FC228