


THROTTLE BODY SYNCHRONIZATION

TIP

Prior to synchronizing the throttle bodies, the valve clearance should be properly adjusted.

1. Remove:
 - Fuel tank cover
Refer to "FUEL TANK" in CHAPTER 5.
 - Headlight assembly
Refer to "COWLINGS" in CHAPTER 3.
 - Headlight stay
Refer to "THROTTLE BODY" in CHAPTER 7.
2. Remove:
 - Vacuum cap ①

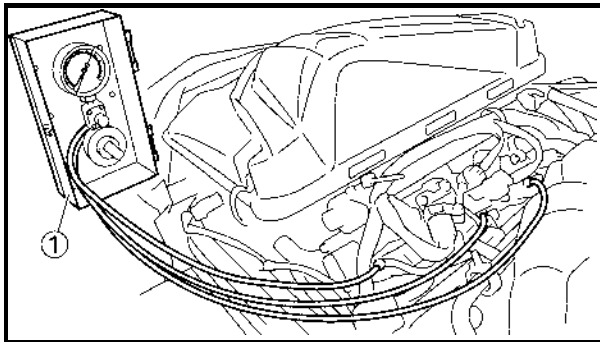

3. Install:
 - Carburetor synchronizer (vacuum gauge) ①
 - Digital tachometer
(Use goods on the market.
Recommended goods: Kaise SK-8401)



Carburetor synchronizer:
YU-44456
Vacuum gauge:
90890-03094

4. Start the engine and let it warm up for several minutes, and then let it run at specified engine idling speed.



Engine idle speed:
1,250 ~ 1,350 r/min

5. Adjust:
 - Throttle body synchronization